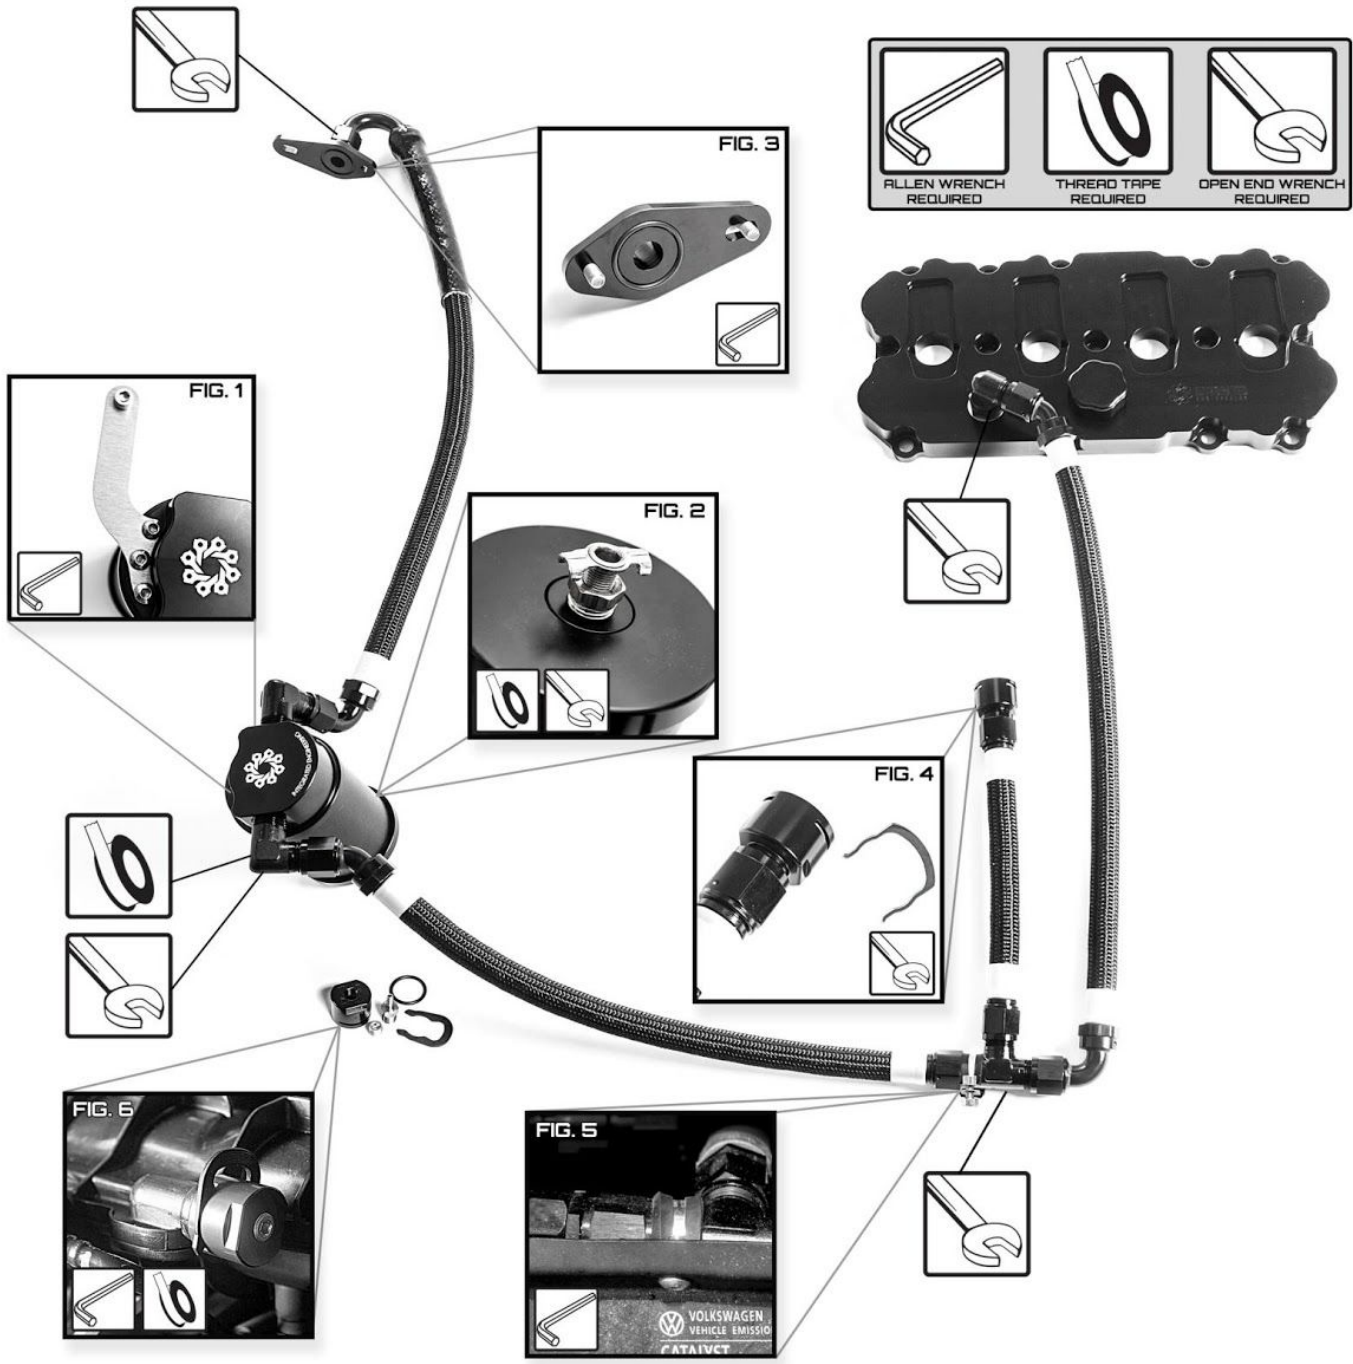


# IEBACC3 INSTALL GUIDE



**Fig. 1-** Three button head cap screws attach bracket to catch can. Single M6x20MM cap screw with washer secures bracket onto engine mount.

**Fig. 2-** Drain valve installs into bottom of catch can.

**Fig. 3-** O ring installs into IEBAVC16 flange, which bolts to turbo using M6x16MM cap screws.

**Fig. 4-** Once block breather adapter is installed onto breather hose, it clips onto oil filter housing using included clip.

**Fig. 5- OPTIONAL-** Tee fitting can be mounted to radiator support with loop clamp, cap screw, and bolt. Drill hole in radiator support to mount.

**Fig. 6-** Boost cap installs onto intake manifold with included clip. Barb can be installed to connect boost gauge, otherwise plug hole with included plug.